



Disassembling RCA RCT6272W23 Case

Disassemble your device case

Written By: Stephen Radachy



INTRODUCTION

In this guide, we will go through disassembling your device's case to access internal components

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Case



- Use a philips #00 screwdriver to unscrew both 4.064mm screws at the top of the device which hold it together.

Step 2



- Press a plastic opening tool into the space between the front and back portions of the case.
- Run it along the perimeter of the device to unhook the many plastic tabs.
- Gently pull both sides apart.



The speaker is connected to the back cover so be careful when separating

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 02:06:13 AM.